

SCANNDY enter cradle/wedge configuration mode for ...

... serial cradle or keyboard wedge



._\$1\$_.

... BlueTooth cradle



._\$2\$_.

start cradle cfg



._\$.%

start cradle cfg



._\$.%

start wedge cfg



._\$/%

perform cradle / wedge
configuration

stop



E O C F

SCANNDY exit cradle/wedge configuration mode



._\$0\$_.